


Installation Instructions

1. Fit soffit to timber header 26mm from front face.
(1.5" No.6 screws).
2. Plumb line and fit sole plate to floor.
(1.5" No. 6 screws).
3. Mark 57mm centre line on timber standard.
4. Fit 1st hinge back plate to standard 105mm down
from header on 57mm centre line using
1" No. 6 screws.
5. Mount remaining hinge plates to door hinges.

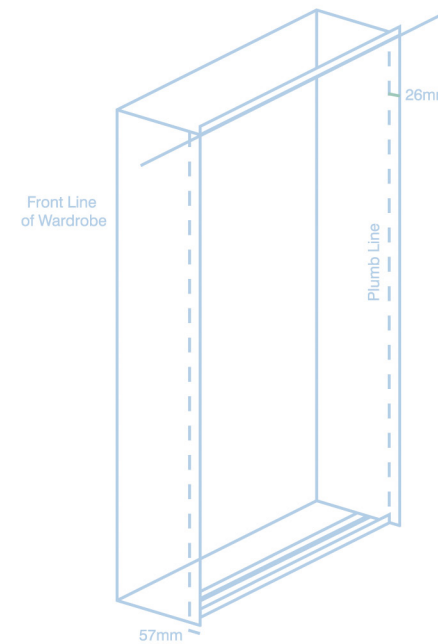

6. Locate door to top hinge plate and fix.
7. Align hinges with plates to 57mm centre line and secure to frame.
8. Fit bi-fold guide wheels into top and bottom track and lock into position.
9. Fit guide wheel hinges and tighten screws.
10. Adjust doors using hinge back plates and guide wheels.
11. Fit handles to door.

